Follow these instructions carefully for the correct mechanical and electrical installation of the DustIO

# DustiQ - instruction sheet









-4°F to 140°F

## Requirements



#### Cable connection


Wire	Function	Connect with
Yellow	Modbus® RS-485	Data +
Grey	Modbus® RS-485	Data -
White	Power 12 to 30 VDC	
Black	Power ground	
Blue	Modbus® common / Ground	Ground
Shield	Housing	Ground*
* Connect to ground if DustIQ is not grounded		

#### Default

Modbus® baud rate		
19200		
Parity		
even		
even		
Stopbits		
1		
-		
Address		
11441.000		
1		
Local dust profile		
Arizona test dust		

# Push-Pull Connect the supplied cable to the socket labelled 'Host'

#### Positions and options

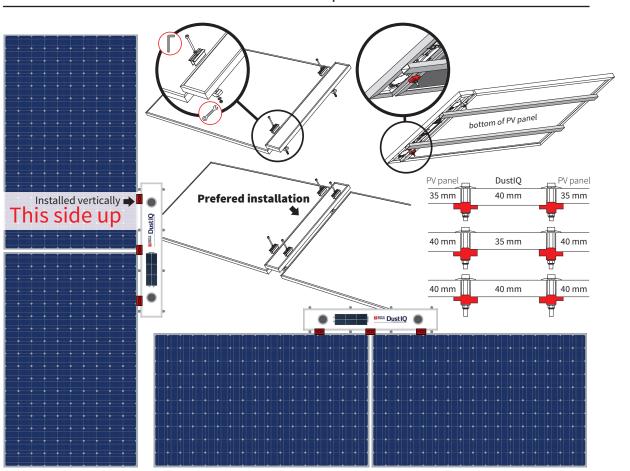

### Dimensions

